			NEW
	MQ-99 User's Manual CE FC C Ball-point Pen & USB Memory & Voice Recorder MSIP-REM-ESO-MQ-99		How to record
Cautions in use	<ul> <li>* We are not responsible for the loss of recordings caused by wrong usage, A/S, other reasons.</li> <li>* We are not responsible for the damage or third party's claims caused by the usage of this product.</li> <li>* Disassembly, remodeling, impact, the usage in place of low temperature, high temperature, high humidity can be the cause of failure.</li> <li>* Please save the important recordings into PC frequently.</li> </ul>		Time setting     1) After USB connection on PC, perform the program of 'Time Setup'     saved in product by double-click, and the right window of     "date_time.cfg Creator" appears.     Version. V101
FCC Caution Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.	FCC Note This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designd to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, any, cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures; - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help.	Setting before record - Time setting - Recording sound	<ul> <li>2) Click the button of "Start" in the window of "date_time.cfg Creator", and file of "date_time.cfg" is created in product.</li> <li>3) Separate product from PC, and battery remains is indicated on ①status light and lamp blinks rapidly and time setting is completed. Caution-1. Date and time set in PC is set up automatically. (Time to click the button of Start is set up at the point of separating product.) Caution-2. When battery is discharged, date is initialized. Before record, perform time setting again and use it.</li> <li>Recording sound quality setting</li> </ul>
Name of each part	<ul> <li>Ball pen lead </li> <li>Front </li> <li>Recording switch </li> <li>Microphone </li> <li>USB terminal</li> <li>Recording mode switch </li> <li>Status light</li> </ul>	quality setting - SVOS level setting	* In Mode(Recording Quality) within right window of "date_time.cfg Creator", select XHQ or HQ and click the button of "Start", and setting is completed. * Basic setting is "XHQ". <u>Memory</u> <u>8GB 16GB 32GB</u> <u>Recording time</u> <u>XHQ(Super High Quality)</u> <u>about 144hrs</u> <u>about 288hrs</u> <u>about 576hrs</u> <u>about 576hrs</u> <u>about 1152hrs</u> * Recording time is the standard of memory capacity and is different from the hours of battery use (continuous recording time).
Charging the unit Charging time : about 2 hours	<ul> <li>* This product has built-in rechargeable battery. (Please charge it before use.)</li> <li>* When you hold @ring and turn @main body counterclockwise, it is separated.</li> <li>* When you connect @USB terminal into the USB port of PC, ①status light is turned on and charging starts.</li> <li>(* When charging is completed, status light blinks.)</li> </ul>		<ul> <li>SVOS level setting</li> <li>* You can set up the volume of sound to start recording in sound detection recording.</li> <li>* In SVOS Level within right window of "date_time.cfg Creator", select one among "+2, +1, 0, -1, -2" and click the button of "Start", and setting is completed.</li> <li>* Basic setting is "0".</li> <li>* Please change after testing according to place and situation.</li> </ul>
Battery remains indication	* When recording starts or the body is separately from PC or USB AC adaptor after charging, status light indicates battery remains into 3 classes according to battery remains for 5 seconds.	Recording is possible without setting. (Basic setting : Sound Quality-XHQ, SVOS-0)	SVOS Level         -2       -1       0       +1       +2         (response to loud sound)        (basic setting)        (response to low sound)
Connecting into PC (PC O/S: Windows XP, Vista, 7, 8, 10)	<ul> <li>* When this device is connected into the USB port of PC (USB can be connected only in the state of recording stop.), it is recognized as a removable disk.</li> <li>* For playback, please use the music playback software of PC.</li> <li>** Caution : When you take the product out of PC, please be sure to perform "safe removal of hardware". If you remove USB forcibly, fatal error can happen to the product.</li> </ul>	Selecting recording mode (Continuous Recording /SVOS)	<ul> <li>* When you move ①recording mode switch to the direction of 『 - 』, continuous recording is set.</li> <li>* When you move ①recording mode switch to the direction of 『』, super voice operated system(SVOS) is set.</li> <li>**In case of super voice operated system, if there is no sound for 1 minute during recording, it saves recording and is converted to standby mode and start recording again automatically when sound is detected. (Max recording standby time : about 30 days)</li> </ul>
Format	<ul> <li>* When you format MemoQ(removable disk), all data of product is deleted.</li> <li>** Caution : It supports the format type of FAT32 only. If you change to other type, product can not work properly.</li> <li>** Caution : Data deleted once can not be restored.</li> </ul>		* We recommend continuous recording if you can control recording start and stop with voice recorder carried and we recommend SVOS recording when you install voice recorder in specific place and can not control recording start and stop.
Correlation table between recordable time and standby time Specifications	Battery remains (Recordable time) (Hour) 15 10 15 10 15 15 15 15 15 15 15 15 15 15	ی Recording	<ul> <li>* When you hold @main body and turn @recording switch clockwise, recording starts after about 5 seconds after status light indicates battery remains.</li> <li>* When you hold @main body and turn @recording switch counterclockwise, recording stops and current recordings are saved. (Recording file is saved in the folder of RECORD as a format of MP3.)</li> </ul>
specifications	Change the ball pen lead Warranty Card		

# Specifications

### MQ-99 Model Memory 8GB 16GB 32GB Recording time XHQ about 144 hrs about 288 hrs about 576 hrs HQ about 288 hrs about 576 hrs about 1152 hrs Hours of XHQ about 27 hrs battery use HQ about 31 hrs Super Voice Operated Recording standby time : about 30 days System(SVOS) Basic setting level : about 60dB(A) Max number of recording files 9,999 files Dimension, Weight 14.3mm(Φ) x 133.5mm(L) , 28.5g Battery type 3.7V, Li-Polymer 230mAh Usage environment Temperature:0~ 40°C, Humidity:20~80% User's manual Accessory

# Change the ball pen lead

## Warranty Card

 
Change the ball pen lead		,	
* Separate      Front by turning counterclockwise		oduct name	Pen Voice Recorder
and separate ball pen lead by pulling and insert new ball pen lead into separated hole.	Model no.		MQ-99
····	Purchasing date		
©Front @Ball pen lead		rchasing place	
		l.	
,	Etc.		
Paid service	Warranty Period		One year from purchasing date
- Defect caused by careless use.	Customer	Name	
<ul> <li>Defect caused by user's internal modification.</li> <li>Defect caused by natural disasters like fire,</li> </ul>		Address	
salt damage, flood, earthquake, etc. - Defect out of warranty period.		Tel.	

Mode (Record Quality)	SVOS Level				
	0+1				
C HQ	<ul> <li>0 (Default)</li> </ul>				
	O - 1				
	O - 2				
2018:01:01:00:00:00					
Star					

Recording

for a long time

(use of external power)



* When you hold <sup>(</sup> )main body and turn <sup>(</sup> )recording switch clockwise, recording starts after about 5 seconds after status light indicates battery remains.	Recording	Stop(White)
* When you hold <sup>(e)</sup> main body and turn <sup>(f)</sup> recording switch counterclockwise, recording stops and current recordings are saved. (Recording file is saved in the folder of RECORD as a format of MP3.)	©Status light	Counterclockwise
<ul> <li>* Recording more than 5 hours is split and saved by the unit of 5 hours.</li> <li>* When a section 5 hours is a final saved by the unit is a final saved by the unit of 5 hours.</li> </ul>	@Main body	• Recording switch
* When recording files exceed 9,999, recording is not possible any Please delete unnecessary recording files and use it.		

\* When you connect it into PC or USB adaptor during recording, you can record for a long time. While you record for a long time, charging indicating lamp blinks in the interval of 5 seconds and you can record up to the recording time per memory.