 


## !! PRECAUTIONS !!

This product starts normal shooting immediately when the power is turned on. When changing to wifi mode, please change the mode during normal shooting. You can check the product video manual in the data center of Damoacam website.



operation button

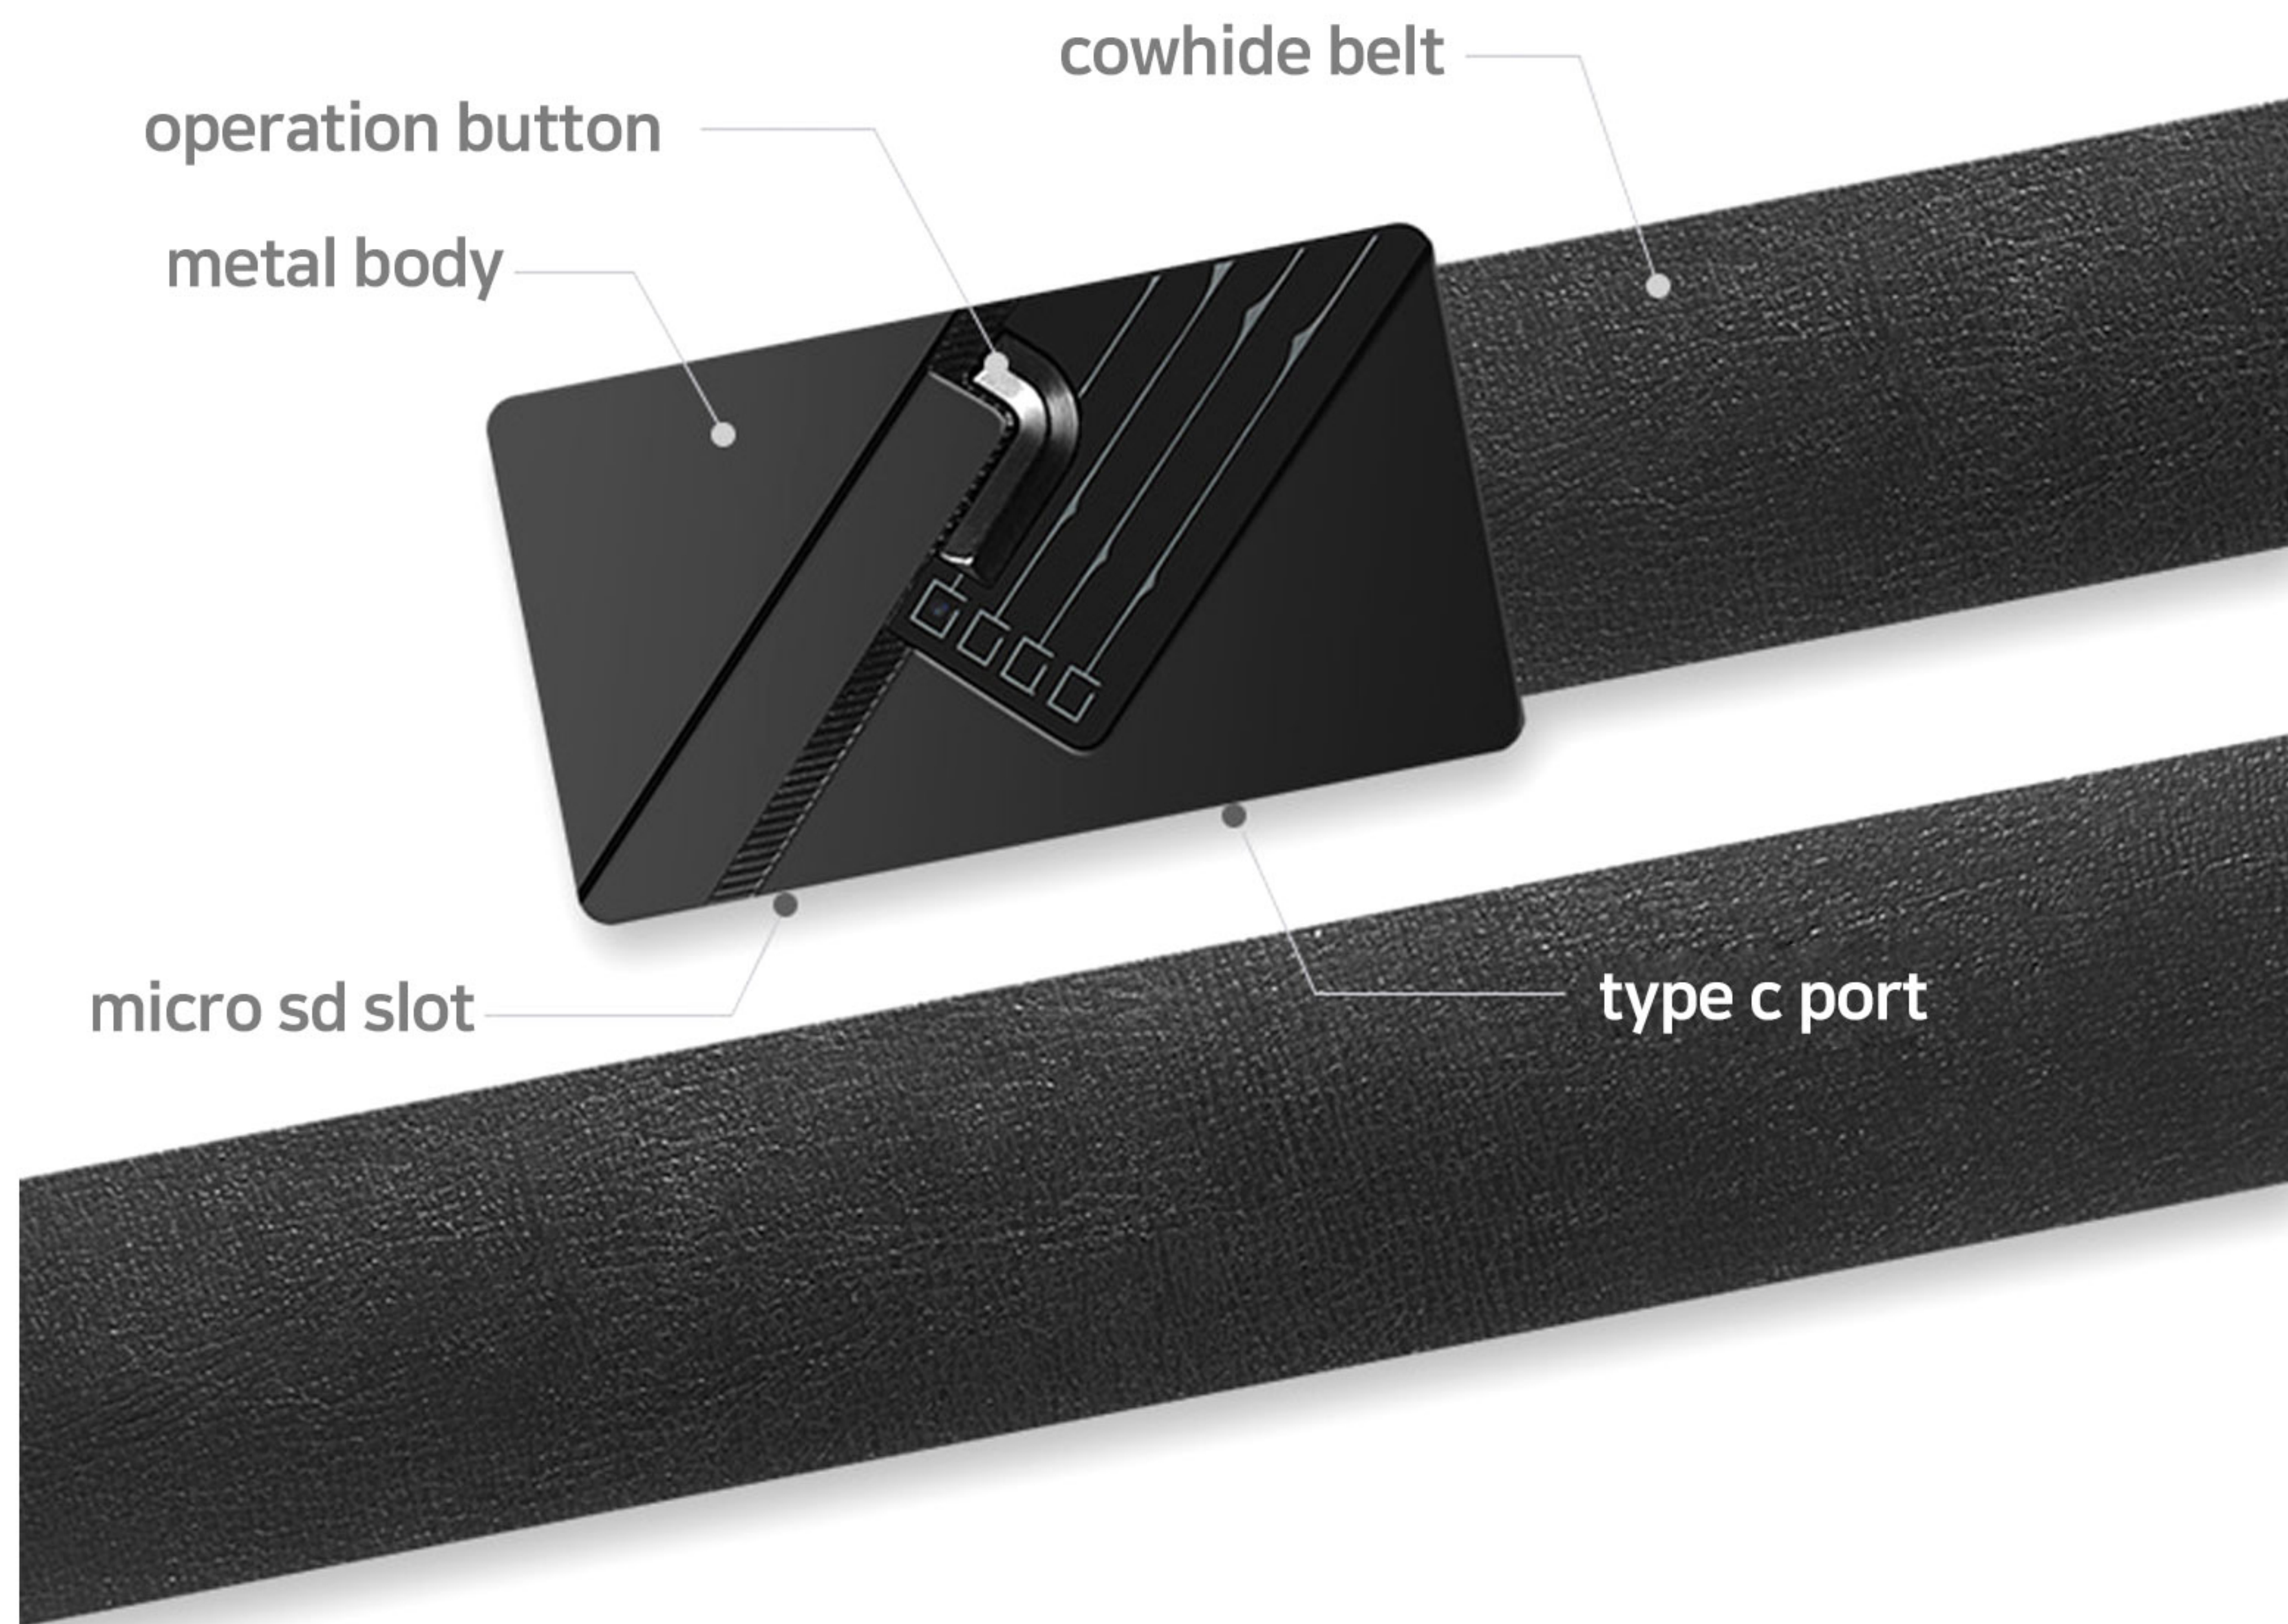

status lamp

## 01 FILMING

### Start shooting

When the operation button is pressed for 3 seconds, the blue lamp turns on. After waiting for 10 seconds, it blinks 4 times before normal shooting starts.

### change wifi mode

If you press the operation button twice during normal shooting, the blue lamp blinks quickly and turns off, and it changes to wifi mode and the picture is taken.

### stop shooting

If you press the operation button once, the blue lamp turns on for a while and then blinks. If you press the operation button for 4 seconds while the blue lamp is blinking, the blue lamp turns off and the product turns off. It becomes OFF state.

\* For reference, the product power OFF must be turned OFF only in the normal mode.

## 02 DATA CHECK

To check data, remove the SD card from the product and connect it to the included reader.

 
 
 
 
 
 
 
 
 
 
## 03 PRODUCT CHARGING

Please charge the product for 2-3 hours using the included cable.

## PRODUCT RESET

1. After turning on the power and the lamp is on, in normal shooting mode, when the blue lamp blinks, press and hold the operation button for 15 seconds.
2. The blue lamp blinks while pressing, and then the blue lamp is fixed for about 10 seconds. At this point, take your hand off the button.
3. The fixed blue lamp blinks quickly and if you press the operation button twice in succession, it is converted to normal mode and the power is turned off at this time..
4. And when the power is turned on again, the product is initialized.

04 HOW TO SET UP WIFI

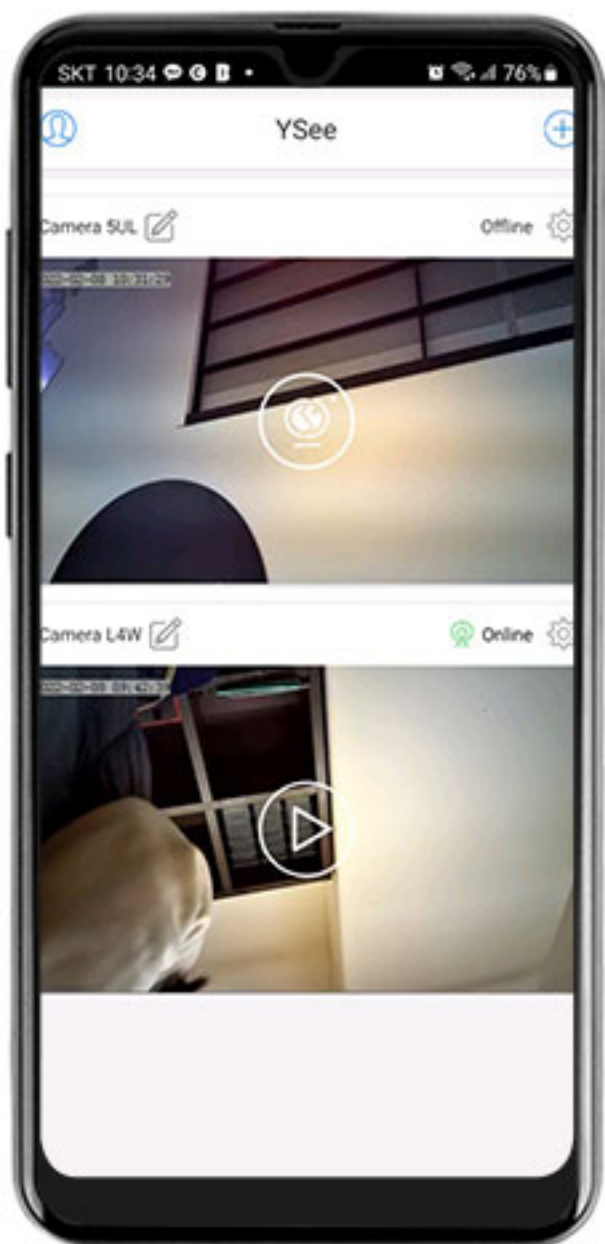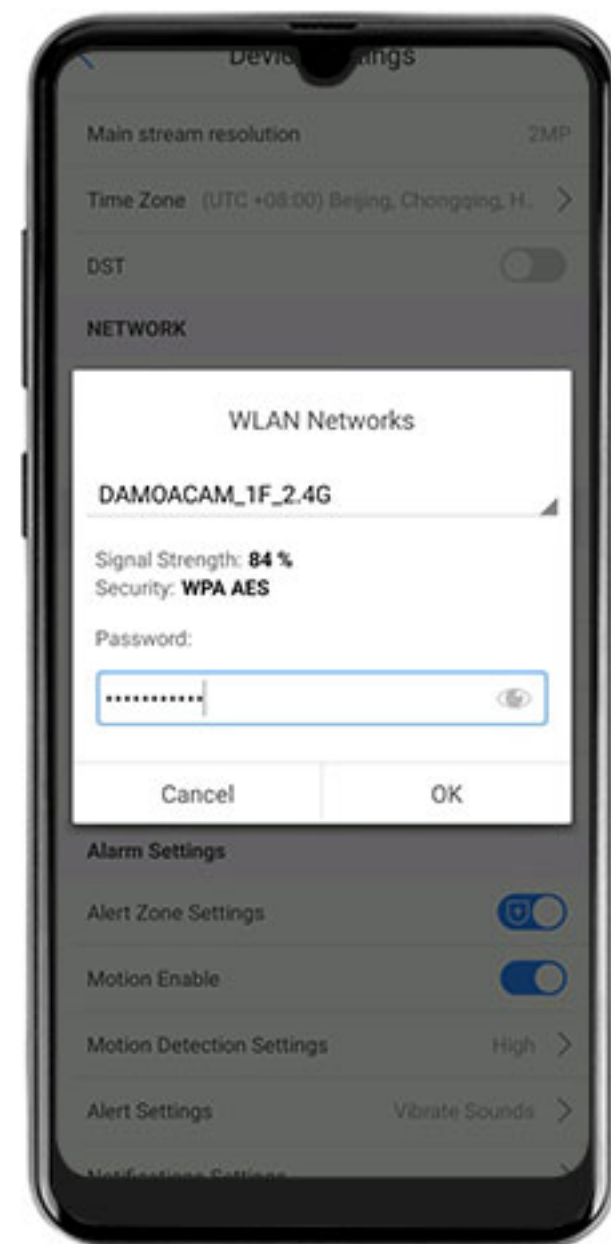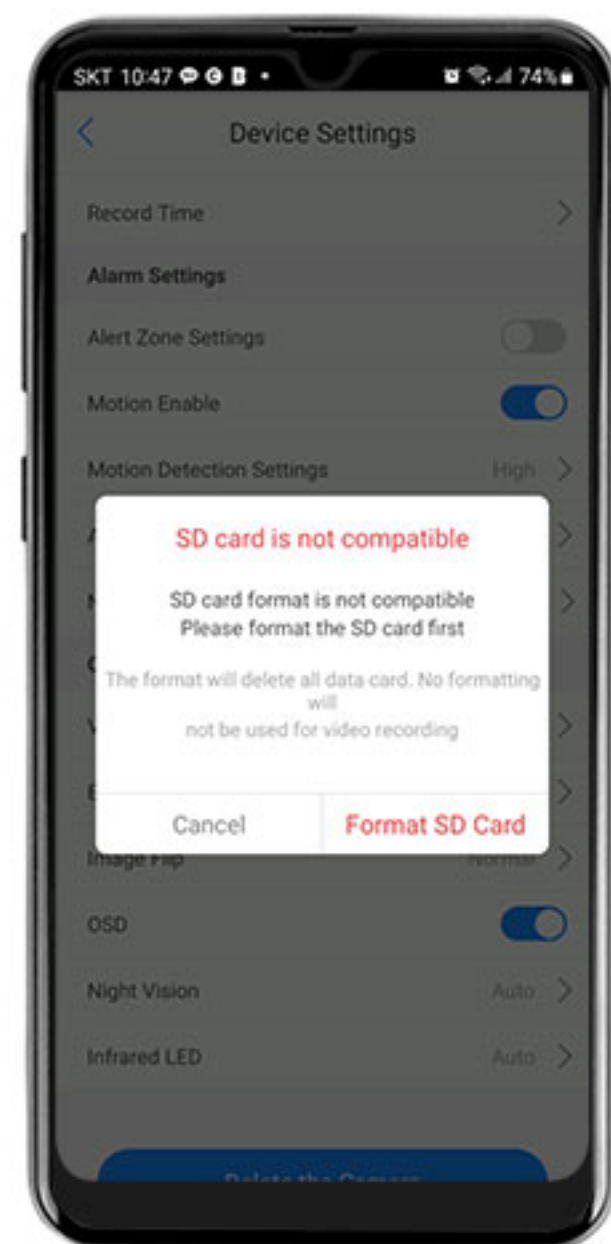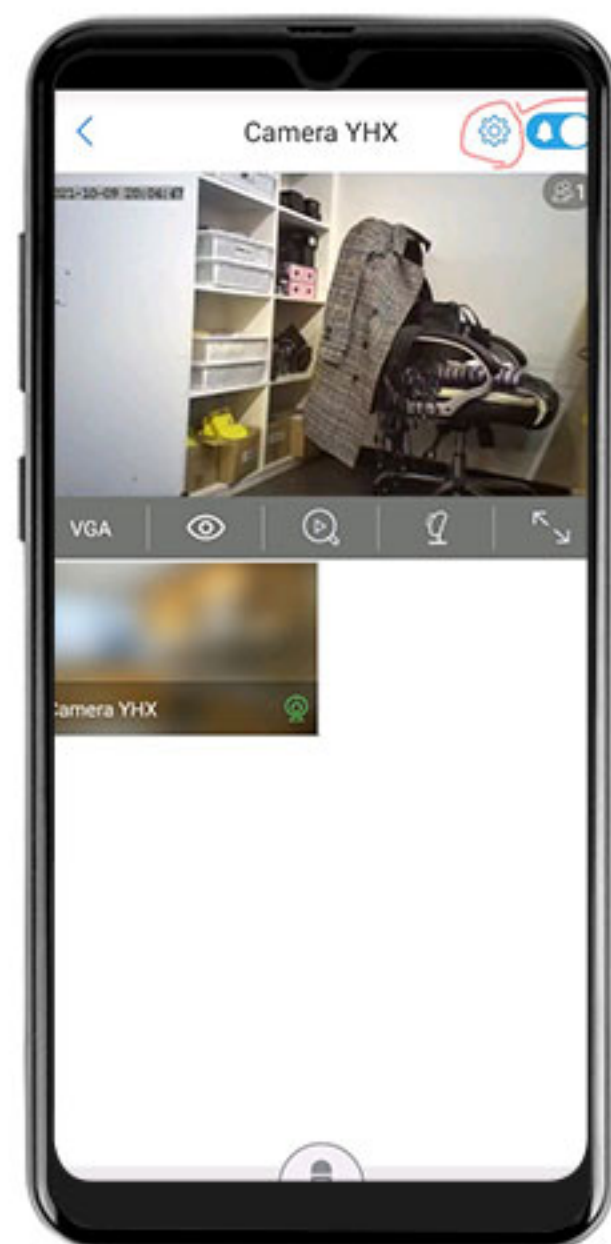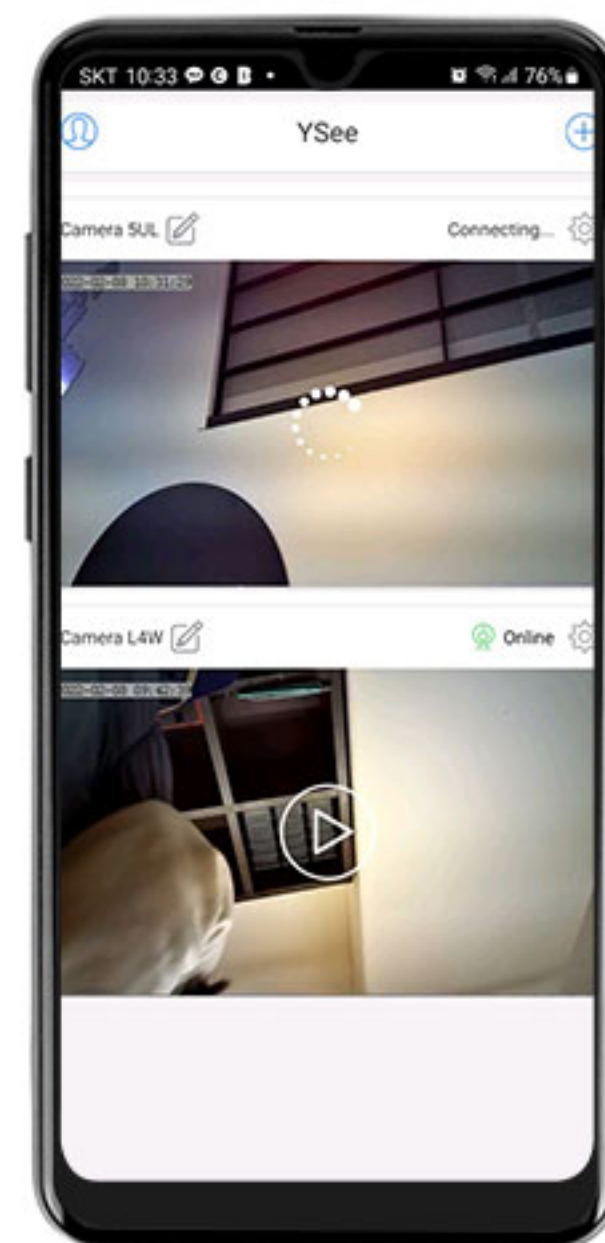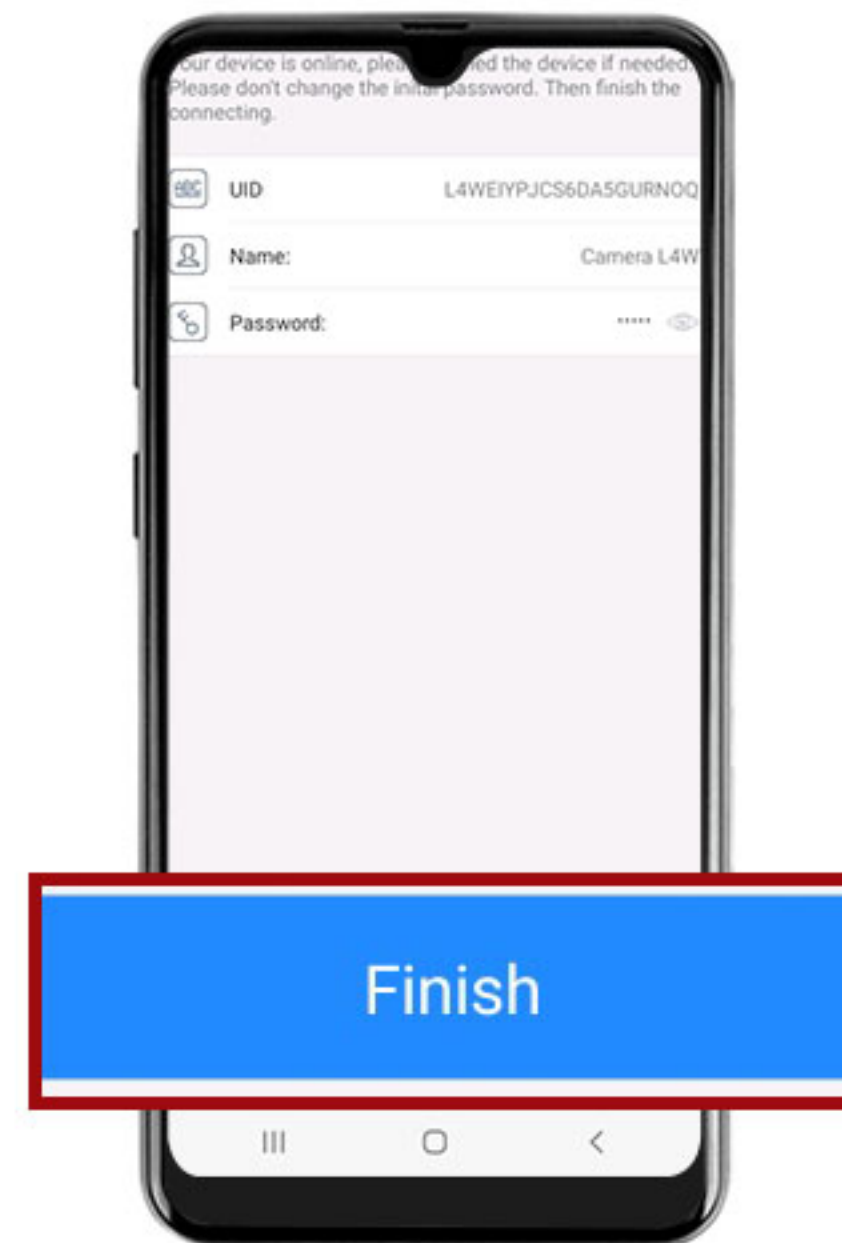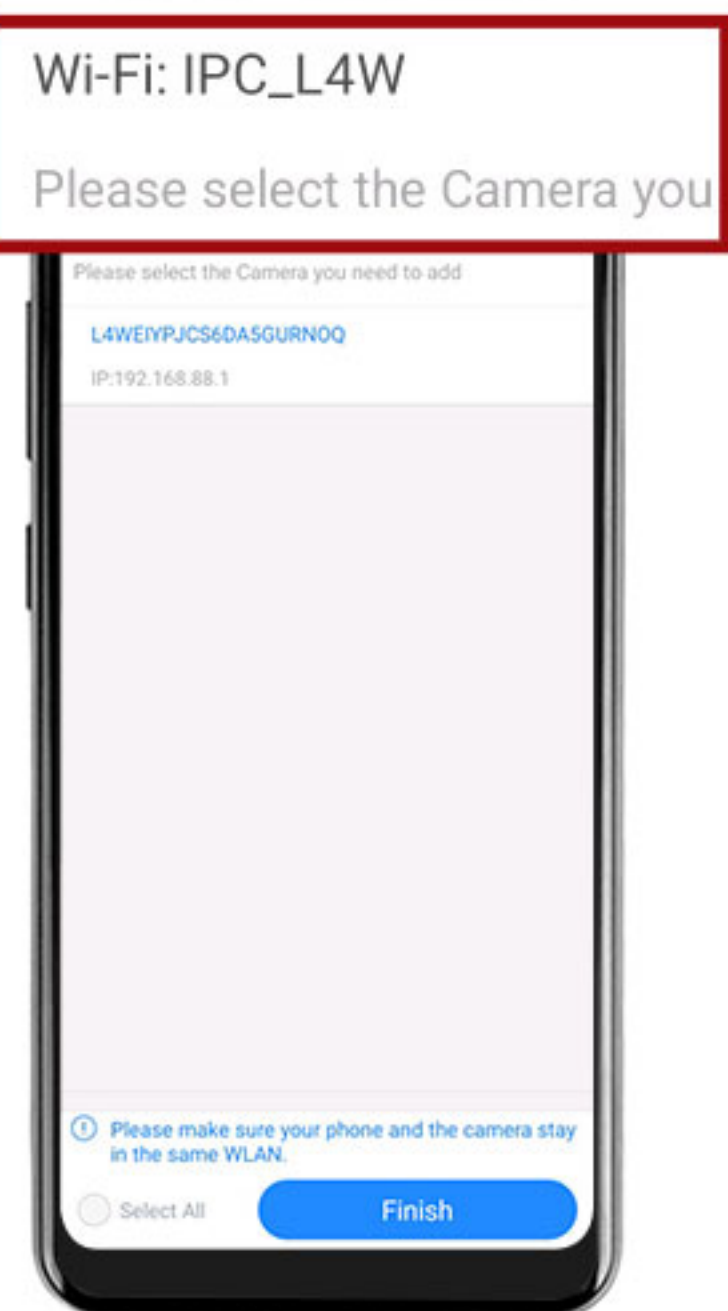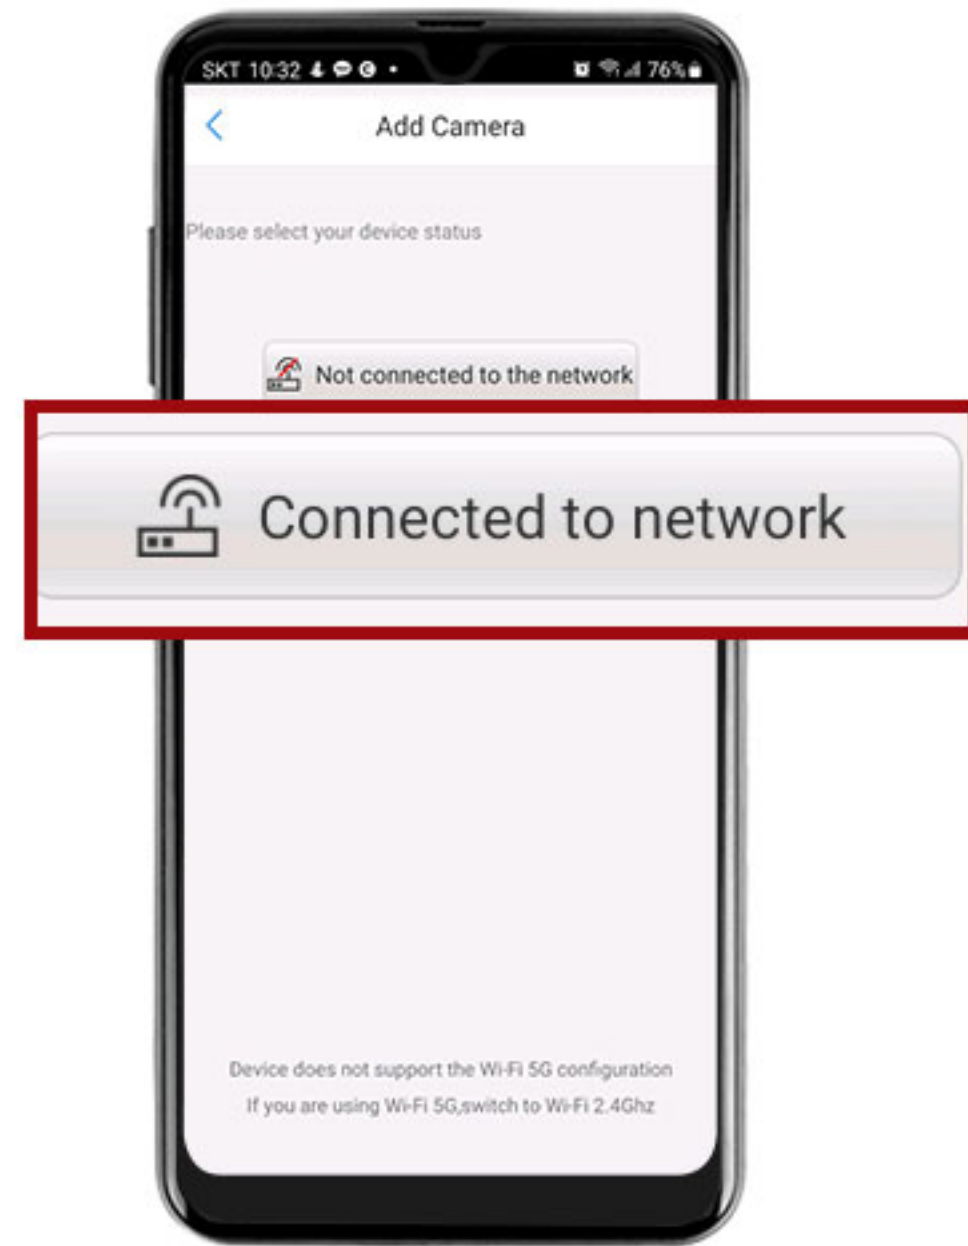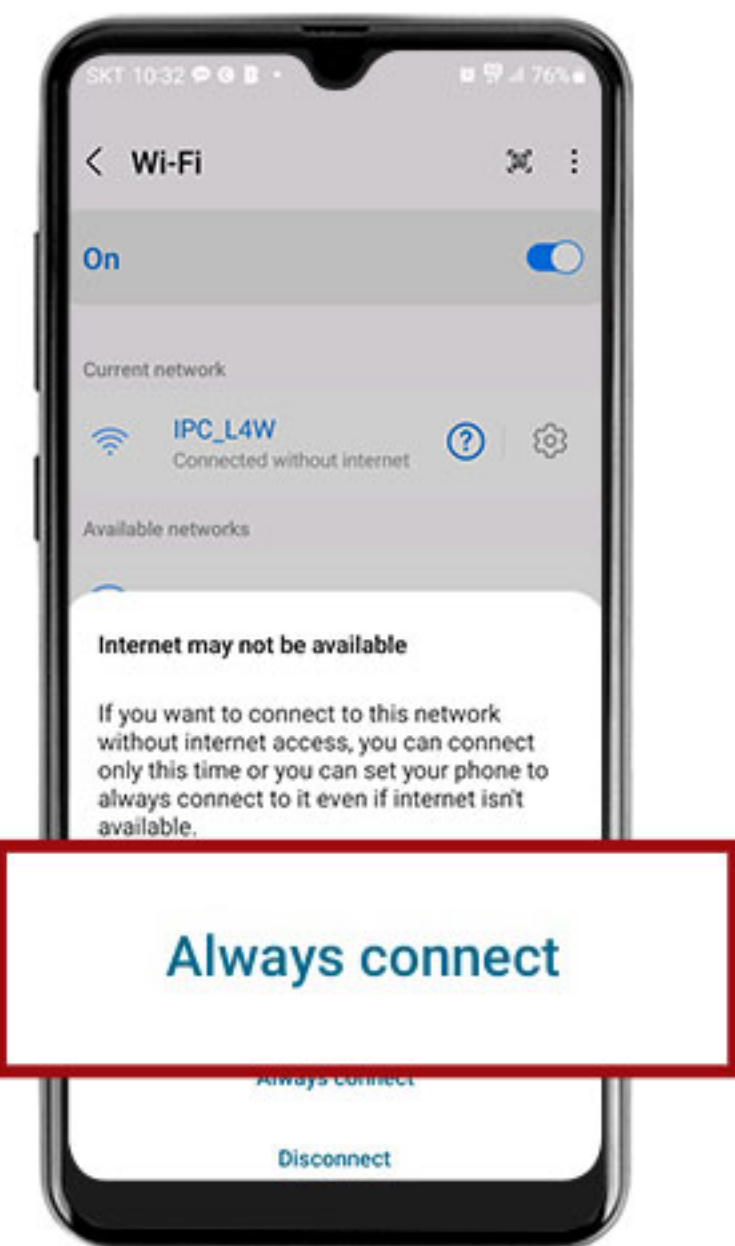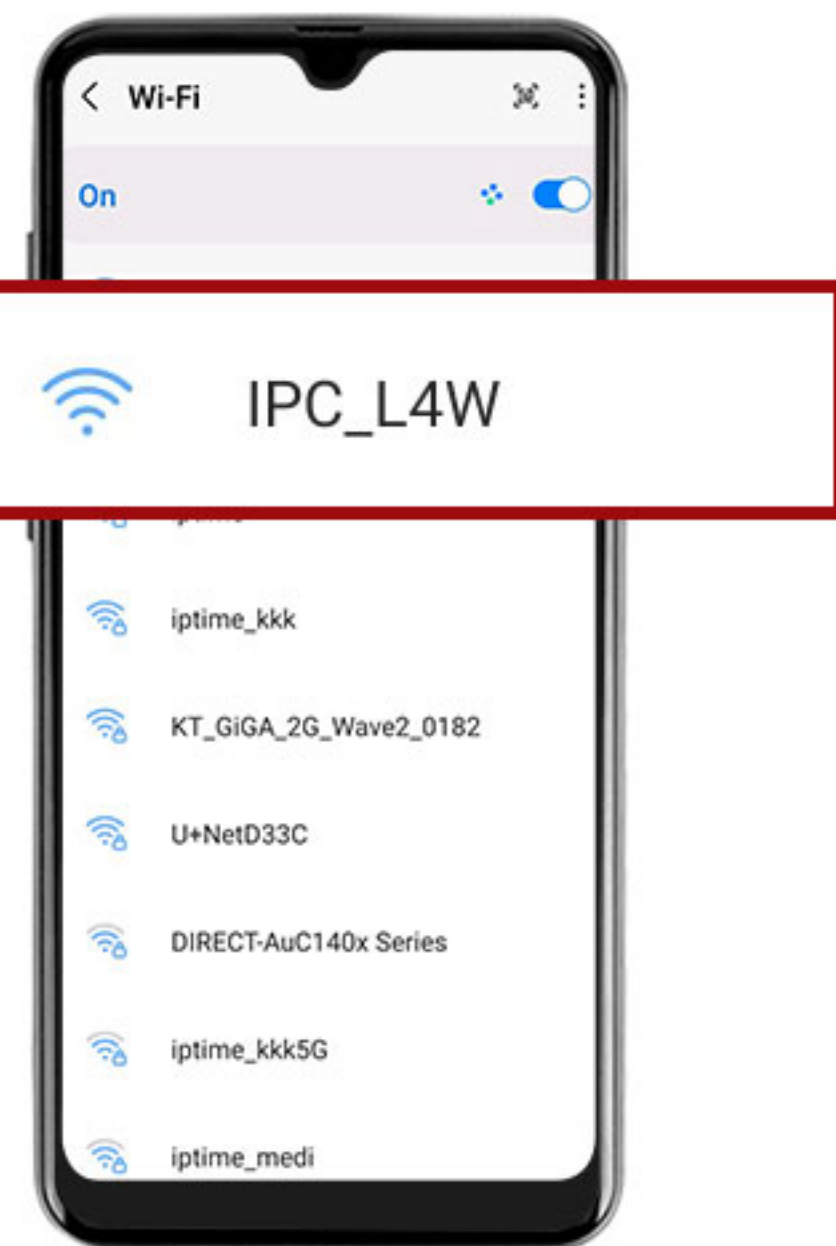

64g or larger sd card only

**⚠ Precautions !**

- After receiving the product, charge it sufficiently before operation.
- Because it is a small electronic product, it generates some heat when charging or shooting.
- When disconnecting after recognizing the USB, please remove it after safely removing the removable disk.
- Damoacam does not take any legal responsibility for infringing on the privacy of others or using it for illegal purposes.

manufacturer : DamoaCam co., ltd  
 SHOPPING MALL : WWW.DAMOACAM.COM  
 HOME PAGE : WWW.DAMOACAM.CO.KR



DAMO A

# WB200FHDW

