


## !! CAUTION !!

THIS PRODUCT IS A PRODUCT THAT STARTS NORMAL SHOOTING IMMEDIATELY WHEN THE POWER IS TURNED ON. WHEN CHANGING TO WIFI MODE, PLEASE CHANGE THE MODE DURING NORMAL SHOOTING. Product video manuals can be found in the data room on the Damocam website.



Operation button and status indicator lamp

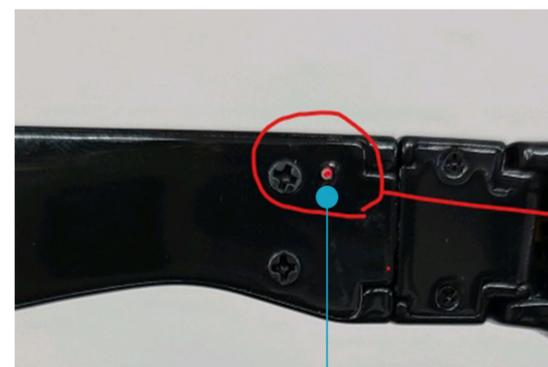

Battery connection status lamp

## 01 FILMING

### Start filming

When you press the power button for 3 seconds, the red lamp turns on, waits for 10 seconds, then turns on. It blinks 4 times and then takes pictures in normal mode.

### wifi mode

If you press the operation button twice while shooting in normal mode, the red lamp blinks quickly and then turns off. Filmed in Wi-Fi mode.

### Stop filming

When you press the operation button once, the red lamp lights up briefly and then blinks in the set mode. If you press the operation button for 4 seconds while the red lamp is blinking, the red lamp turns off and the product turns off.

## 02 CHECK DATA

Simply remove the SD card installed in the product, insert it into the included reader, and check the connection to the PC.

## 03 PRODUCT CHARGING

To charge the product, use the included cable for 2 to 3 hours.

## 04 PLATE REPLACEMENT




Replacing the basic plate with a camouflage plate  
If you slightly lift the border of the square plate as shown in the image, it will be removed. After removing it, simply replace it with a plate that suits your environment.  
Caution: Be careful not to scratch or damage the lens when removing the border. Please be careful.

## PRODUCT RESET

1. Turn on the power, turn on the lamp, and press the operation button for 5 seconds when the red lamp blinks in normal shooting mode.
2. The red lamp blinks while you press it, and then the red lamp becomes fixed for about 10 seconds. At this time, release your hand from the button.
3. The fixed red lamp blinks quickly and switches to normal mode by pressing the operation button twice in succession. At this time, turn off the power.
4. When you turn the power back on, the product will be initialized.

05 HOW TO SET UP WI-FI

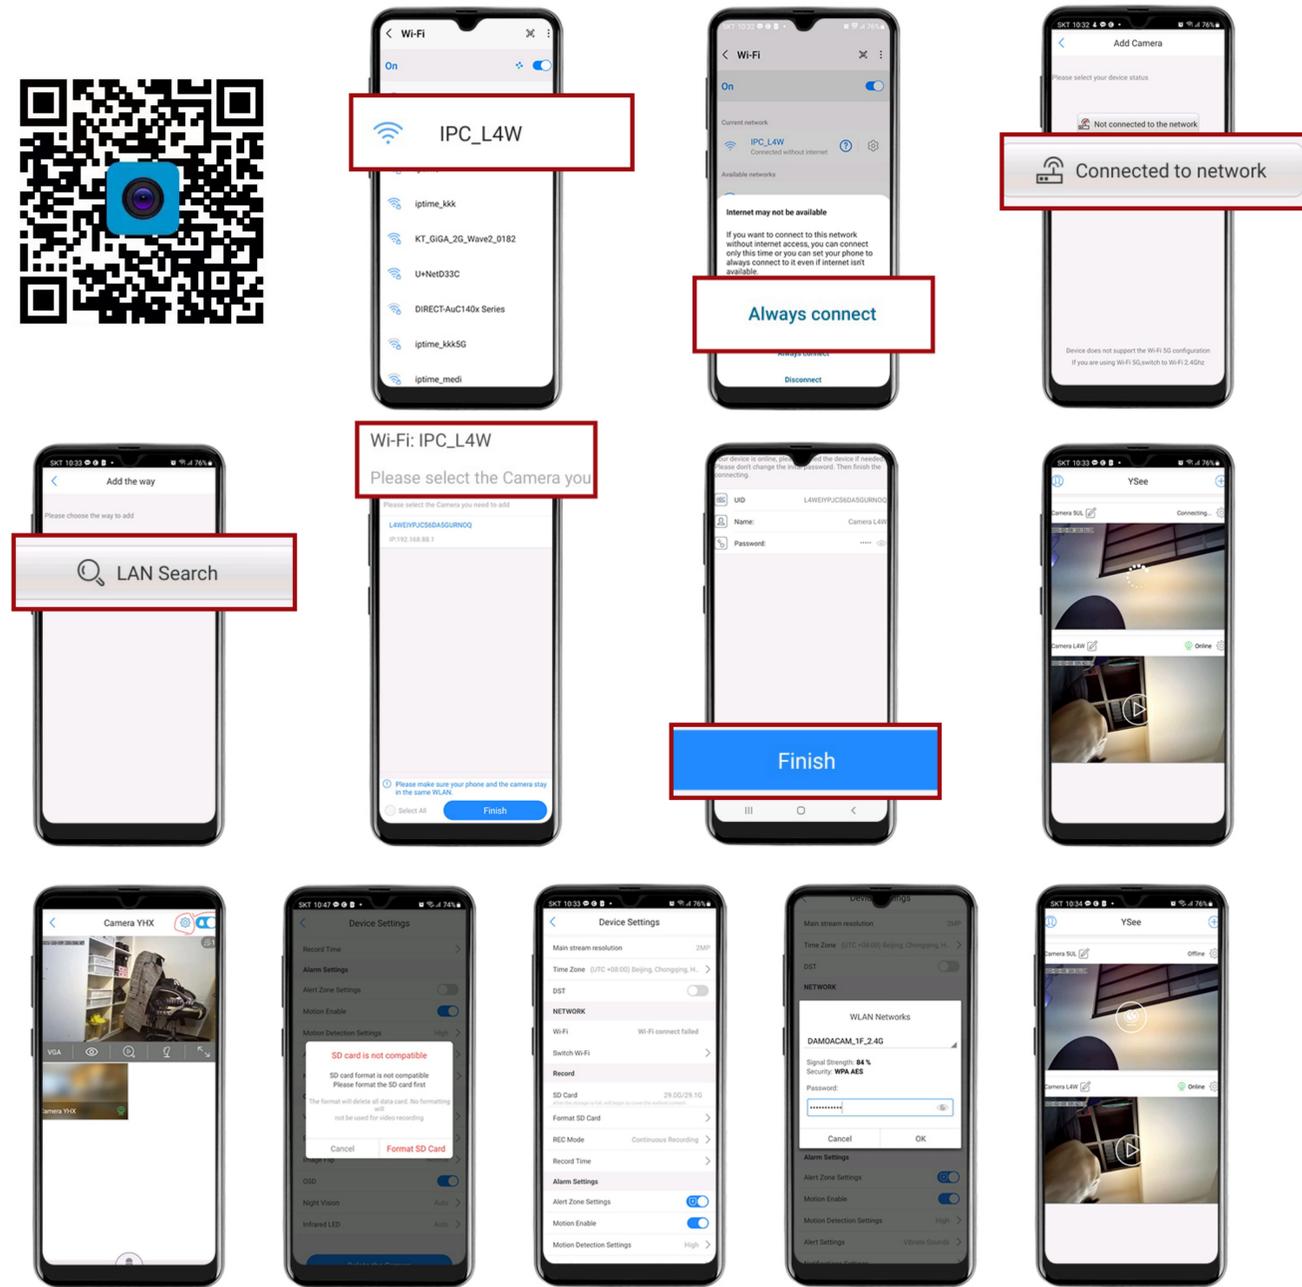

64g or larger sd card only

**CAUTION!**

- After receiving the product, please fully charge it before operating it.
- Because it is a small electronic product, some heat is generated when charging or taking pictures.
- When disconnecting after recognizing the USB, please safely remove the mobile disk before disconnecting.
- Damoacam does not take legal responsibility in case of infringement on other people's privacy or use for illegal purposes.

Manufacturer: Damoacamco., Ltd.  
 Shopping mall : WWW.DAMOACAM.COM  
 Home page : WWW.DAMOACAM.CO.KR

# HDA2MPGLS



DAMO A

# GC200FHDW

