

HDA2MPSMK



DAMO A

FS200FHDW



Detail View

!! PRECAUTIONS !!

This product starts normal shooting immediately when the power is turned on. When changing to wifi mode, please change the mode during normal shooting.

You can check the product video manual in the data center of Damoacam website.



01 PRODUCT CHARGING

Please charge the product for 6-7 hours with the included cable.

02 remote control function

button A hold for 3-5 seconds : On/off/recording, the blue light is on for 10 seconds, then off. The smoke detector continues to record

button B one click : Red light flashes quickly for 3 seconds - take a picture

button C one click : The red light starts flashing slowly
- motion detection - The red light turns off after 10 seconds.

button D one click : wifi on blue light flashing fast - Blue light turns on after 10 seconds

How to change mode In normal mode, press the D button once
Press the D button once in wifi mode/wifi mode →
Change to normal mode

03 FILMING

Start shooting

Press the remote control A and the operation button on the back of the product for 3 seconds
The blue lamp is turned on and after 10 seconds, it blinks 4 times and then the normal shooting starts.

change wifi mode

If you want to change to wifi mode, use Remote Control D or
If you press the operation button on the back of the product twice,
The blue lamp blinks quickly and turns off, and it changes to wifi mode and
the picture is taken.

stop shooting

If you press remote control A or the button on the back of the product once,
the blue lamp turns on for a while and then blinks.
While the blue lamp is blinking, if you press button A or the operation button on
the back for 4 seconds, the blue lamp turns on.
When the light is turned off, the product turns OFF.

*For reference, the product power OFF must be turned OFF only in the normal mode.

04 DATA CHECK

To check data, remove the SD card from the product and connect it to the included reader.

PRODUCT RESET

1. After turning on the power and the lamp is on, in normal shooting mode, when the blue lamp blinks, press and hold the operation button for 15 seconds.
2. The blue lamp blinks while pressing, and then the blue lamp is fixed for about 10 seconds. At this point, take your hand off the button.
3. The fixed blue lamp blinks quickly and if you press the operation button twice in succession, It is converted to normal mode and the power is turned off at this time..
4. And when the power is turned on again, the product is initialized.

05 HOW TO SET UP WIFI



64g or larger sd card only

⚠ Precautions !

- After receiving the product, charge it sufficiently before operation.
- Because it is a small electronic product, it generates some heat when charging or shooting.
- When disconnecting after recognizing the USB, please remove it after safely removing the removable disk.
- Damoacam does not take any legal responsibility for infringing on the privacy of others or using it for illegal purposes.

manufacturer : Damoacam co., ltd
 SHOPPING MALL : WWW.DAMOACAM.COM
 HOME PAGE : WWW.DAMOACAM.CO.KR